

ORDER NO. ARP2729

COMPACT DISC PLAYER

PD-5702 PD-5702-G

PD-S702 AND PD-S702-G HAVE THE FOLLOWING:

T	Model		D	
Type	PD-S702	PD-S702-G	Power Requirement Rema	
HB	0	- "	AC220-230V, 230-240V (switchable) *	
HEM	0	0	AC220 - 230V, 230 - 240V (switchable) *	
HPW	0	-	AC220 - 230V, 230 - 240V (switchable) *	
SD	0	-	AC110V, 120-127V, 220V, 240V (switchable)	

^{*} Change the connection of the power transformer's primary wiring.

- This manual is applicable to the following: PD-S702/HB; HEM, HPW and SD; PD-S702-G/HEM.
- For the following: PD-S702/HEM, HPW and SD; PD-S702-G/HEM, refer to page 32.

CONTENTS

1. SAFETY INFORMATION2	5. PCB PARTS LIST 2
2. DISASSEMBLY3	6. ADJUSTMENTS 2
3. EXPLODED VIEWS,	7. FOR PD-S702/HEM, HPW, SD AND
PACKING AND PARTS LIST ······ 4	PD-S702-G/HEM 3:
4. SCHEMATIC AND	8. PANEL FACILITIES 3
PCB CONNECTION DIAGRAMS9	9. SPECIFICATIONS ····· 3

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A. PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2 Canada PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911

© PIONEER ELECTRONIC CORPORATION 1993

1. SAFETY INFORMATION

- (FOR EUROPEAN MODEL ONLY) -

VARO!

AVATTAESSA JA SUOJALUKITUS
OHITETTAESSA OLET ALTTIINA
NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.
ÄLÄ KATSO SÄTEESEEN.

ADVERSEL:
USYNLIG LASERSTRÅLING VED ÄBNING

NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION UNDGÅ UDSAETTELSE FOR STRÅLING.

– VARNING! OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRAKTA EJ STRÅLEN.



LASER Kuva 1 Lasersateilyn varoitusmerkki

- WARNING!

DEVICE INCLUDES LASER DIODE WHICH EMITS INVISIBLE INFRARED RADIATION WHICH IS DANGEROUS TO EYES. THERE IS A WARNING SIGN ACCORDING TO PICTURE 1 INSIDE THE DEVICE CLOSE TO THE LASER DIODE.



LASER
Picture 1
Warning sign for laser radiation


THIS PIONEER APPARATUS CONTAINS
LASER OF CLASS 1.

SERVICING OPERATION OF THE APPARATUS SHOULD BE DONE BY A SPECIALLY INSTRUCTED PERSON

LASER DIODE CHARACTERISTICS MAXIMUM OUTPUT POWER: 5 mw
WAVELENGTH: 780-785 nm

LABEL CHECK



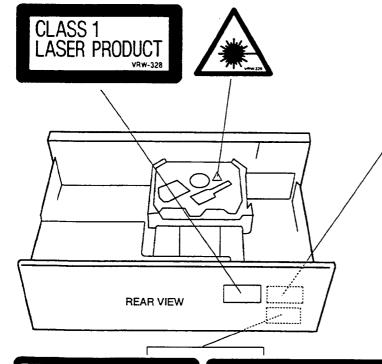

ADVARSEL USYNLIG LASERSTRÄLING VED ANBUNG NÄR SKKERHED SAF-BRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÄLING.

VORSICHT!
UNSICHTBARE LASER-STRAHLUNG TRITT AUS, WENN DECKEL
(ODER KLAPPE) GEÖFFNET IST! MICHT DEM STRAH, AUSSETZEN-

CAUTION
INVISIBLE LASER
RADIATION WHEN OPEN,
AVOID EXPOSURE
TO BEAM PRW1018

HEM type

HB type

HEM type

VARO!

Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättomälle
lasersäteilylle. Alä katso säteeseen.

VARNIKG!

Osynlig laserstrålning när denna del är oppnad och spärren är urkopplad. Betrakta ej strålen. PRW1233

Additional Laser Caution -

1. Laser Interlock Mechanism

The position of the switch (S601) for detecting loading completion is detected by the system microprocessor, and the design prevents laser diode oscillation when the switch (S601) is not CLMP terminal side (when CLMP signal is OFF, that is, high level).

Thus, the interlock will no longer function if the switch (S601) is deliberately set to $\overline{\text{CLMP}}$ terminal side (if $\overline{\text{CLMP}}$ signal is low level).

In the test mode *, the interlock mechanism will not function.

Laser diode oscillation will continue, if pin 1 of M51593FP (IC101) on the preamplifier board loaded on pickup assembly are connected to GND, or pin 19 is connected to low level (ON), or else the terminals of Q101 are shorted to each other (fault condition).


When the cover is opened with the servo mechanism block removed to be turned over, close viewing of the objective lens with the naked eye will cause exposure to a Class 1 laser beam.

* : Refer to page 24.

2. DISASSEMBLY


2.1 REMOVE THE TRAY PANEL AND THE TRAY LENS

Hold the tray panel with your hands as shown in Fig. 1, and grasp the tray with your thumbs and then lift the tray panel up while pulling it toward you with the other fingers. (Fig. 2)

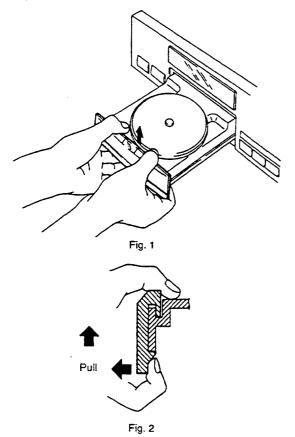



2.2 INSTALL THE TRAY PANEL AND THE TRAY LENS

Align the tray panel with the grooves located at both edges of the tray while holding the tray lens with your fingers, and then press it down till it stops. (Fig. 3)

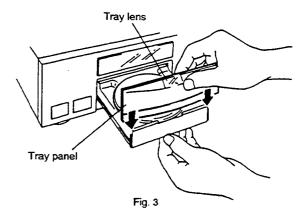

Hold the tray panel and the tray as shown in Fig. 4, and slide them down till you hear a click sound while pressing strongly with your thumbs. (Fig. 5)

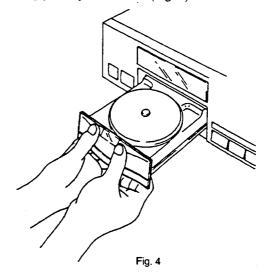

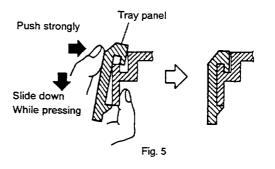

3. EXPLODED VIEWS, PACKING AND PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by " " are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

3.1 EXTERIOR SECTION AND PACKING

Parts List

<u>Mark</u>	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Front panel 7	PAN1280	NSP	42	PCB holder	PNW2100
	2	Name plate	VAM1032		43	H. P. lens	PNW2157
	3	Function panel 7	PNW2278		44	Knob C	RAC1608
	4	Display window	PAM1609		45	Mirror mat sheet	Z23-007
	5	LED lens	PNW2019		46	CD packing case B7	PHG1962
	6	Power button 78	PAC1743		47	Cord with plug	PDE1001
	7	28 key	PAC1734		48	Operating instructions	PRB1196
	8	Function button 78	PAC1744			(English)	TRBITTO
NSP	9	SW PCB assembly	PWZ2537		49	Remote control unit	PWW1069
	10	Screw	PPZ30P150FMC		50	Battery cover	PZN1001
	11	FUNCTION PCB assembly	PWZ2536		51	Protector F	PHA1243
	12	Tray panel	PNW2280		52	Protector R	PHA1253
	13	• • • • •		NSP	53	Battery (R03, AAA)	VEM-022
	14	Screw	BBT30P080FCC	1.01	54	Polyethylene bag	Z21 - 013
	15	Tray lens	PNW2242	NSP	55	Cord holder	DNF1128
	16	Screw	ID 720D040DCC	-			
			IBZ30P060FCC		56	Screw	IBZ30P050FZK
	17	Screw	IBZ30P080FCC		57	Cord clamper	RNH - 184
	18	Insulator	PNW1912	● Da	cking	•	
110D	19	Screw	PPZ30P050FMC	· ra	CKIIIG	·	
NSP	20	PCB spacer	PNY - 404			47 48	3
	21	MAIN PCB assembly	PWZ2499				
NSP	22	Under base 7	PNA1969				' >
	23	Screw	BBZ30P080FCC		52	06 0 €	
Δ	24	Power transformer (11W)(AC220 - 230/230 -	PTT1242 240V)		\nearrow	45	
Δ	25	Cord stopper	CM-22B				51
$\stackrel{\Delta}{\triangle}$	26	AC power cord HB	VDG1051	l Tr			21
_	27	Screw	IBZ30P150FCC		(\sim
	28	Screw	PDZ30P050FMC		コ `		\nearrow
	29	Screw	FBT40P080FZK	<u> </u>			
			121 (0) 0001 210		`	5	
	30	• • • • •					
	31	Bonnet	PYY1175				an an
NSP	32	Rear base B7	PNA2021				< <u></u>
NSP	33	HEADPHONE	PWZ2497				```
		PCB assembly					[50]
NSP	34	MOTOR VR PCB assembly	PWZ2498				S
	35	SERVO TRANS.	PWZ2539	\			/ - \
		PCB assembly			<		49 1
NSP	36	Loading mechanism assembly TT	PXA1521		_		49 1
		,		Ì		\	-46
\triangle	37	Fuse (FU1:T13A)	VEK1003				
	38	Fuse holder	VKR1002				
NSP	39	Cushion (3.5)	PEB1110			\	
NSP	40	Spacer A	PEB1228				54
NSP	41	H. P. angle	PNB1434				
		•				HB type of	only _ <u>~</u> _/

3

ರ

1

2


3.2 LOADING MECHANISM ASSEMBLY TT


Parts List

<u>Mark</u>	No.	Description	Part No.
	1	Lever switch (S601)	DSK1003
	2	Float screw	PBA1027
	3	Rubber belt	PEB1186
	4	Motor pulley	PNW1634
	5	Drive gear	PNW1996
	6	Synchronized lever	PNW2168
	7	Gear pulley	PNW1998
	8	SW head	PNW1999
	9	Float base	PNW2000
	10	Left cam	PNW2001
	11	Right cam	PNW2002
	12	Float spring	PBH1120
	13	Lock spring	PBH1121
	14	Float rubber	PEB1014
	15	Table rubber sheet	PEB1181
	16	Tray	PNW2003
	17	Table guide	PNW2004
	18	Lock plate	PNW2005
	19	D.C. motor (0.75W, LOADING)	PXM1010
	20	Float rubber	PEB1031
	21	Float rubber	PEB1170
	22	Screw	BMZ26P040FMC
	23	Screw	IPZ26P060FCU
	24	Screw	IPZ20P080FMC
	25	Turn table assembly	PEA1165
	26	• • • •	
NSP	27	Loading base	PNW1995
NSP	28	Table shaft holder	PXA1383
NSP	29	Turn table (AL)	PNR 1035
	30	Carriage D.C. motor (0.3W)	PXM1027
	31	Pinion gear	PNW2055
	32	D.C. motor assembly	PEA1236
	33	(SPINDLE, with oil) Carriage base	PNW2058
		-	
	34 35	Disc table	PNW1067
	<i>3</i> 5	Screw	JFZ20P030FNI
	30 37	Screw	JFZ17P025FZK
	38	Gear 3 Gear 2	PNW2054 PNW2053
			₹
	39	Washer	WT12D032D025
	40	Pickup assembly	PEA1179
	41	Guide bar	PLA 1094
NICD	42	Gear 1	PNW2052
NSP	43	Gear stopper	PNB1303
	44	Screw	BPZ20P060FMC
	45	Earth spring	PBH1132
NSP	46	Mechanism base TT	PNB1431
	47	Screw	BPZ26P100FMC
	48	PWB holder	PNW2057

Mark	No.	Description	Part No.		
NSP NSP NSP	49 50 51 52	Mechanism board assembly Binder Servo mechanism assembly TT92	PWX1192 PEC-107 PXA1479		
	53 54 55 56 57 58 59	Stop ring Shaft holder Screw Screw Earth lead Caution label	YE20S PNB1382 BPZ26P060FMC BBZ26P060FMC PDF1148 PRW1244		
How to install the disc table Use nippers or other tool to cut the two sections marked (A) in figure 1. Then remove the spacer.					

While supporting the spindle motor shaft with the stopper, put the spacer on top of the carriage base and stick the disc table on top (takes about 9Kg 2 pressure). Take off the spacer.

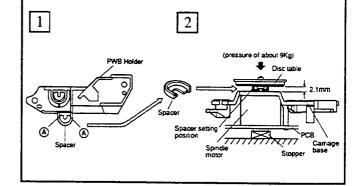


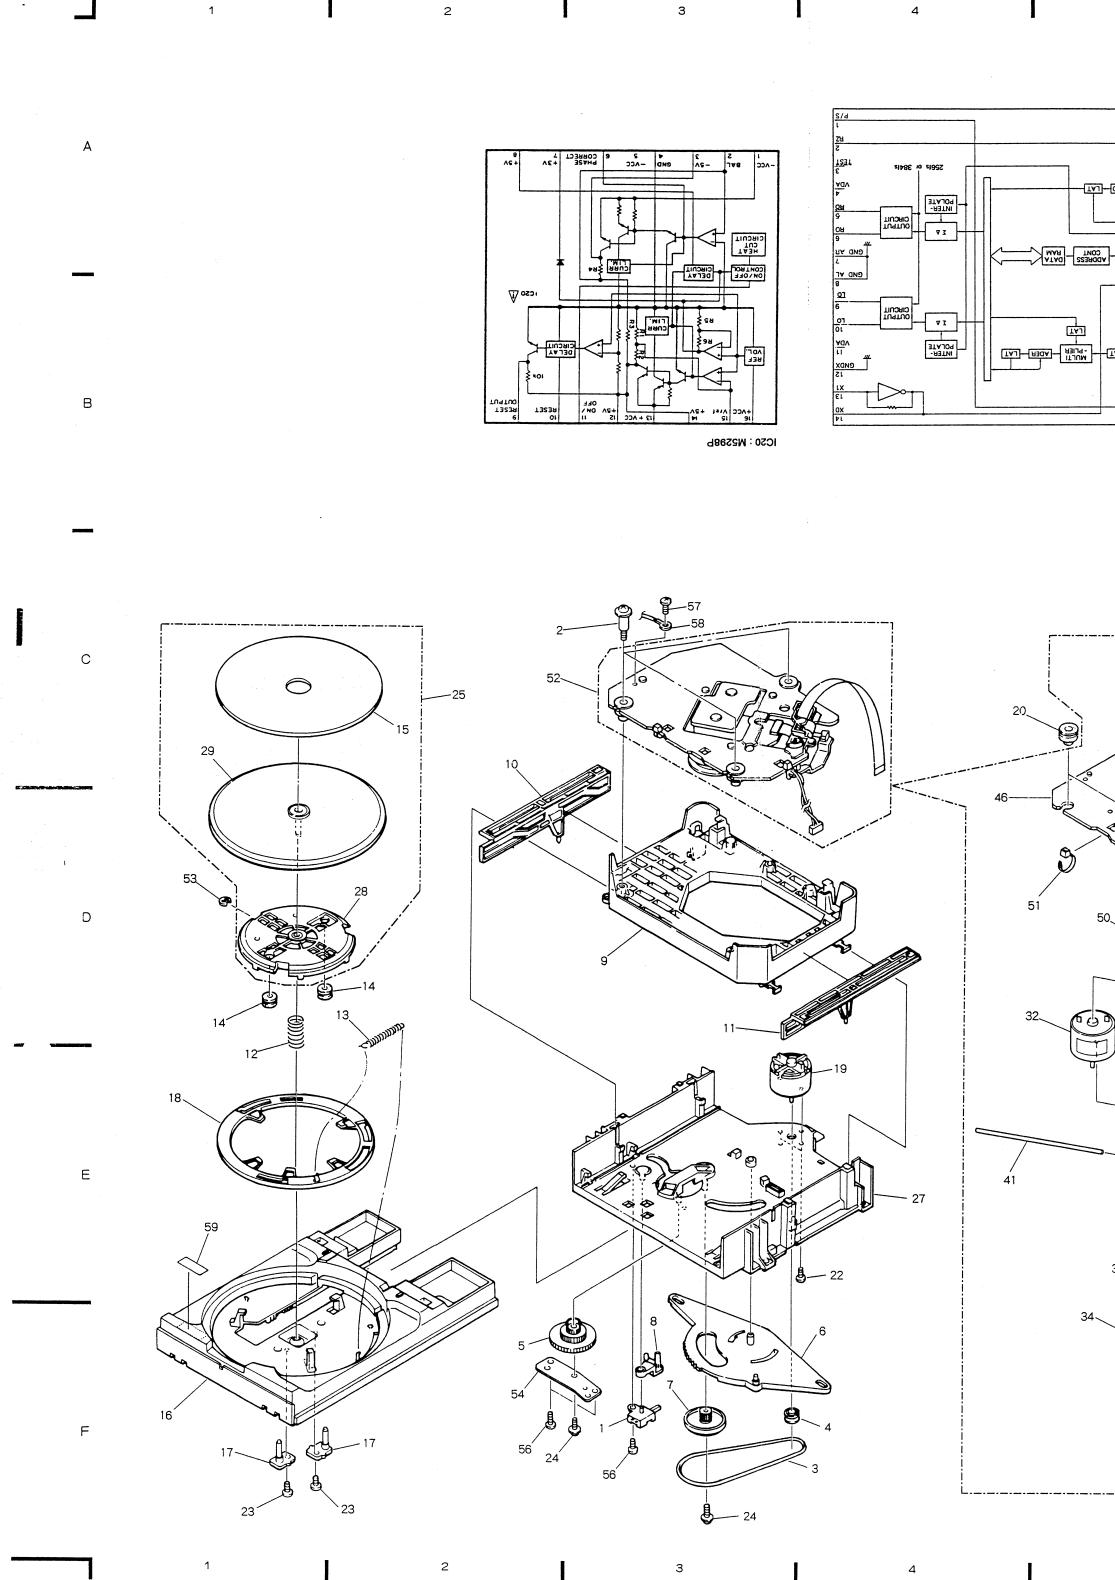


CND

IC401: PD2029A

5

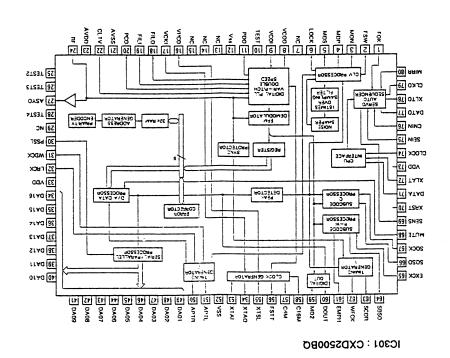

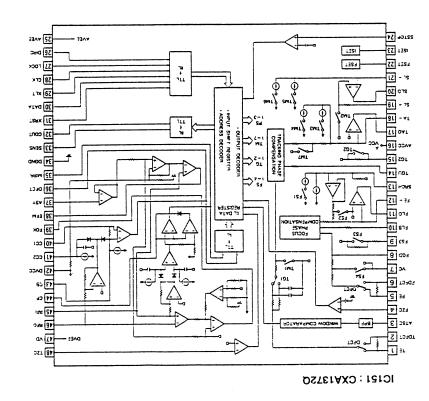

● IC BLOCK DIAGRAMS

4. SCHEMATIC AND PCB CONNECTION DIAGRAMS

For SCHEMATIC DIAGRAM

Note: 1. When ordering service parts, be sure to refer to "PARTS LIST of EXPLODED VIEWS" or "PCB

2. Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.

3. RESISTORS:

Unit: $k:k\Omega$, $M:M\Omega$, or Ω unless otherwise noted. Rated power: 1/4W, 1/6W, 1/8W, 1/10W unless otherwise noted. Tolerance:(F): ±1%, (G): ±2%, (K): ±10%, (M): ±20% or ±5% unless otherwise noted.

Unit : p:pF or $\mu\,\text{F}$ unless otherwise noted. Ratings: capacitor (µF) / voltage (V) unless otherwise noted. Rated voltage: 50V except for electrolytic capacitors.

Unit : m:mH or μ H unless otherwise noted.

6. VOLTAGE AND CURRENT:

 \square : DC voltage (V) in PLAY mode unless otherwise noted. ⇔mA or ←mA: DC current in PLAY mode unless otherwise noted. Value in () is DC current in STOP mode.

7. OTHERS:

- ⇒ : Signal route.
- Ø : Adjusting point. ■ ▼(Red): Measurement point.
- portance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.

8. SWITCHES (Underline indicates switch position):

OUT OF P.C.BOARD ASSEMBLY S601: CLAMP MECHANISM BOARD ASSEMBLY S610: INSIDE

FUNCTION PCB ASSEMBLY S702: PLAY(▶) S703: PAUSE(11)

S704: OPEN/CLOSE(▲) S705: TRACK/MANUAL SEARCH(►►►►) S706: TRACK/MANUAL SEARCH(14444)

S707: STOP(■) S708: > 20

S710: CHECK S711: PGM

S712: 20 S713: 15

S714: 10 S715: 5

S716: COMPU/AUTO EDIT S717: TIME FADE EDIT

S718: PEAK SEARCH

S719: DELETE

S720: 19 S721: 18 S722: 17

S723: 16 S724: 14

S725: 13 S726: 12

S727: 11

S728: 9 S729: 8

S730: 7 S731: 6

S732: 4 S733: 3


S734: 2

For PCB CONNECTION DIAGRAMS

P.C.B. pattern diagram indication	Corresponding part symbol	Part name
	[Q. [Q]	Transistor
D 5 G	A . A	FET
c= 04	○ 4 - ○	Diode
a €=	⊶∫ 4⊸∘	Zanner dlode
4←	~ <u>_</u> €	LED
	⊶ √	Varactor
0	£0°	Tact switch
	·M.	Inductor
0	٠٩٩٠	Coll
		Transformer
		Filter
(C)		Ceramic capacitor
CD		Mylar capacitor
\$()		Styrol capacitor
\$	<u>0−</u> #−0	Electrolytic capacitor (Non polarized)
		Electrolytic capacitor (Noiseless)
€)]	Electrolytic capacitor (Polarized)
		Electrolytic capacitor (Polarized)
	<u></u>	Power capacitor
		Semi-fixed resistor
		Resistor array
~		Resistor
-O-		Resonator
		Thermistor
1. This P.C.B. connec	tion diagram is viewed	from the parts mounted s

- 2. The parts which have been mounted on the board can be replaced with
- The diode marked with O shows cathode side.
- those shown with the corresponding wiring symbols listed in the above Table.

 3. The capacitor terminal marked with ______shows negative terminal.

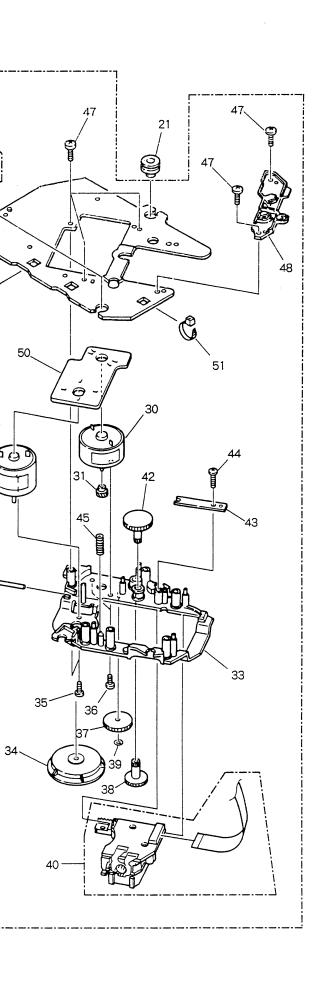

SW PCB ASSEMBLY S751: TIME


\$753: POWER STANDBY ON - OFF

S754: DISPLAY ON - OFF


S752: REPEAT

9

4.1 SCHEMATIC DIAGRAM

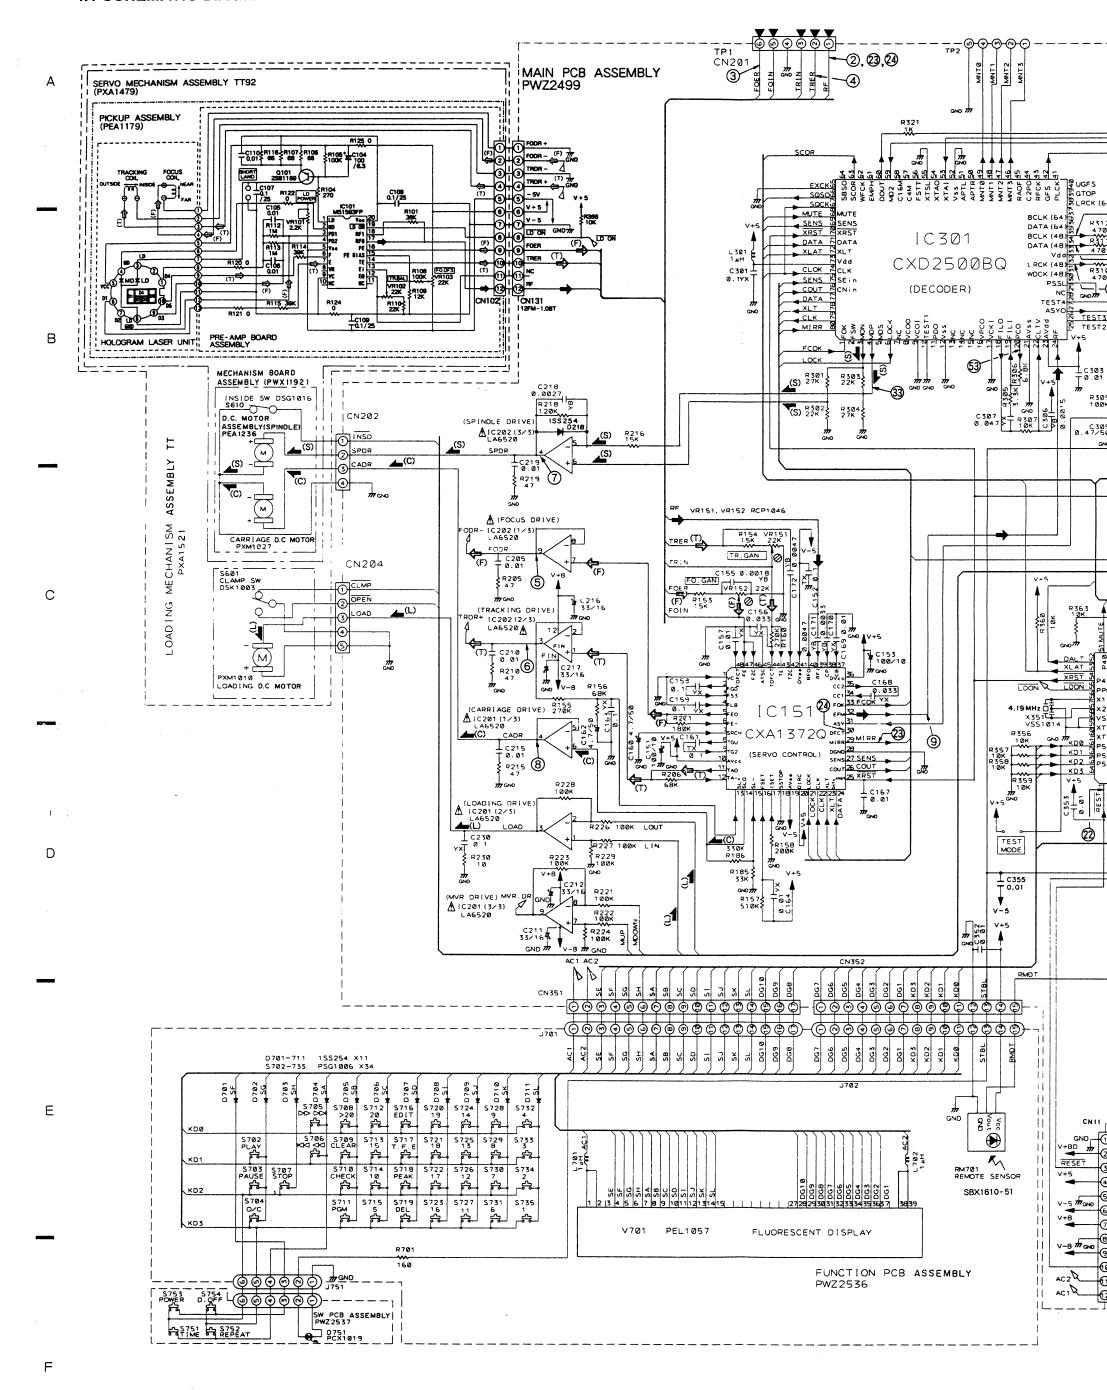

i

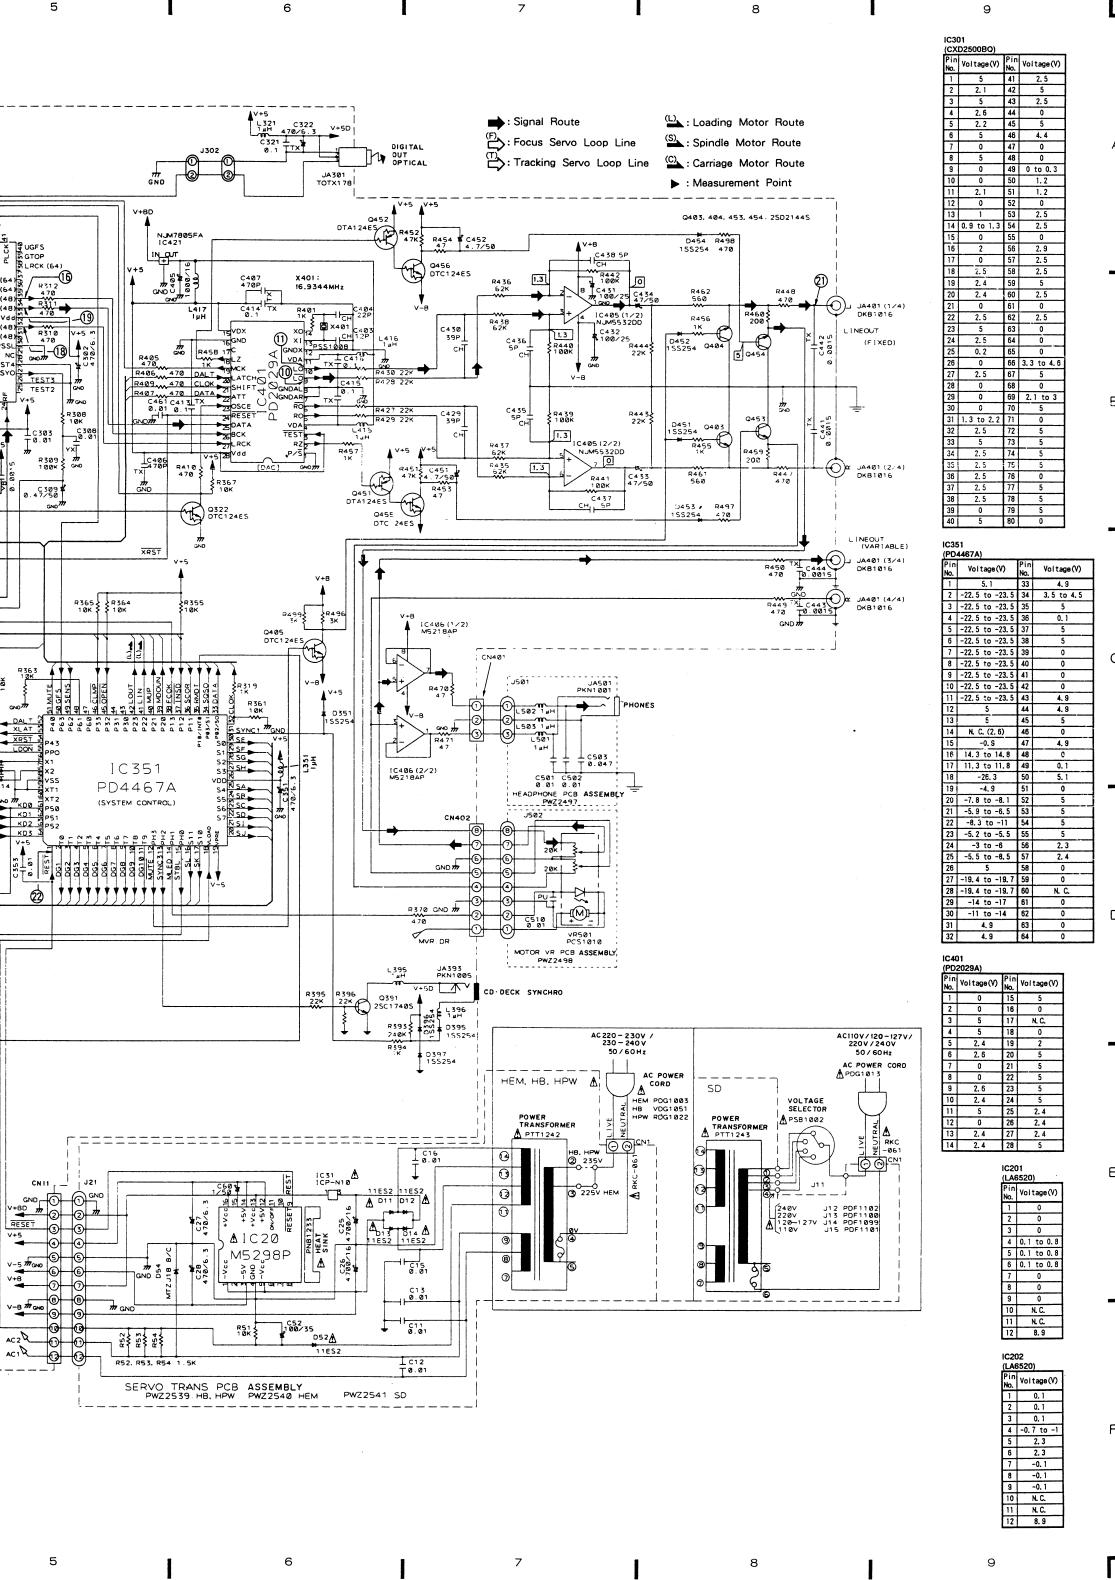


WAVEFORMS

Note: The encircled numbers denote measuring points in the schematic diagram.


*1 50T-JUMP:After switching to the pause mode, press the manual search key.

*2 FOCUS-IN:Press the key without loading a disc.

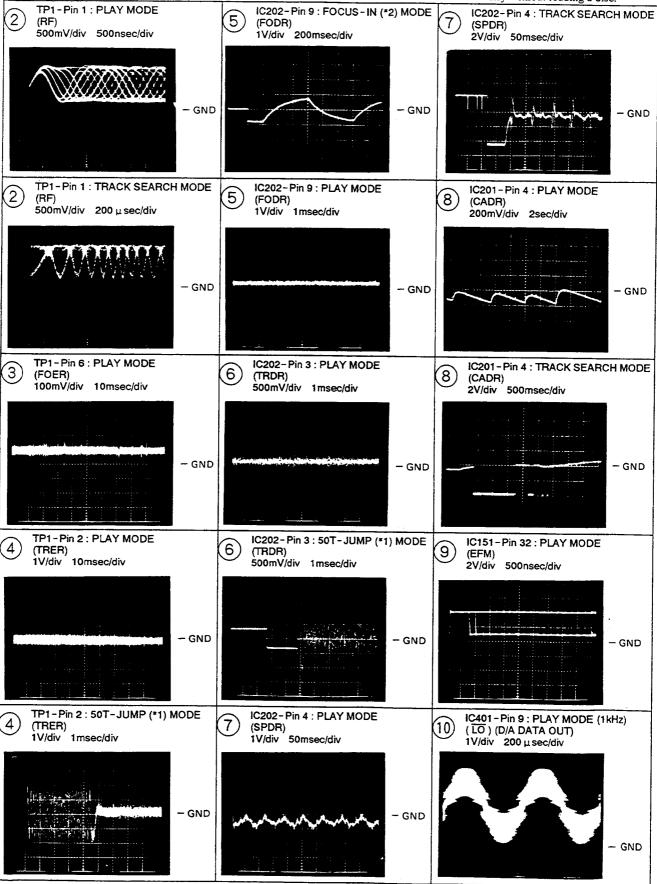


PD-S702


- *3 POWER ON:Plug AC cord into AC wall socket.
- *4 POWER OFF: Unplug AC cord form AC wall socket.

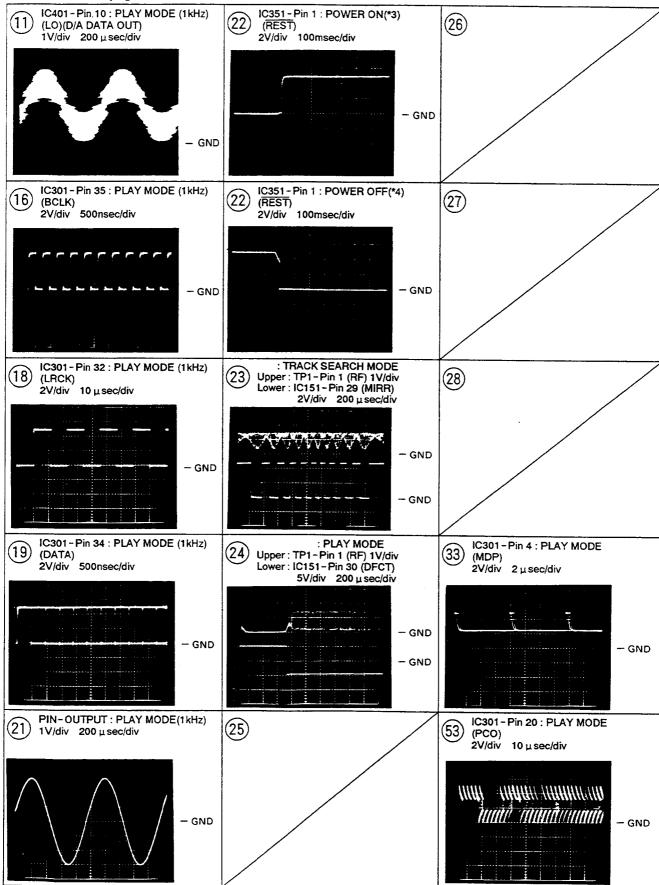


4.2 PCB CONNECTION DIAGRAMS

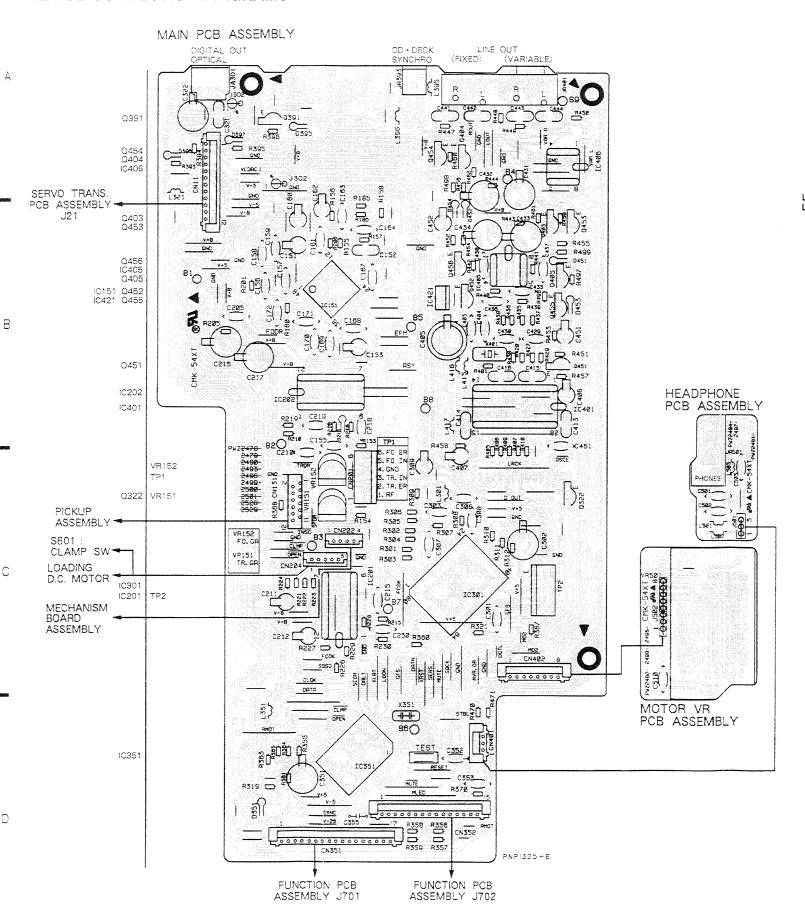

1

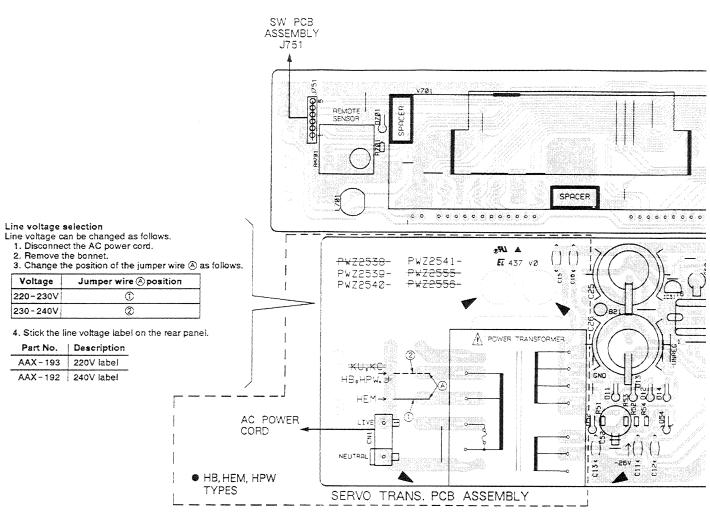


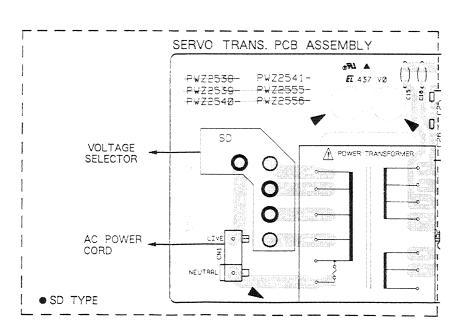

This P. C. B. connection diagram is viewed from the parts mounted side.


2 1 3 1 4 1 5 1 6




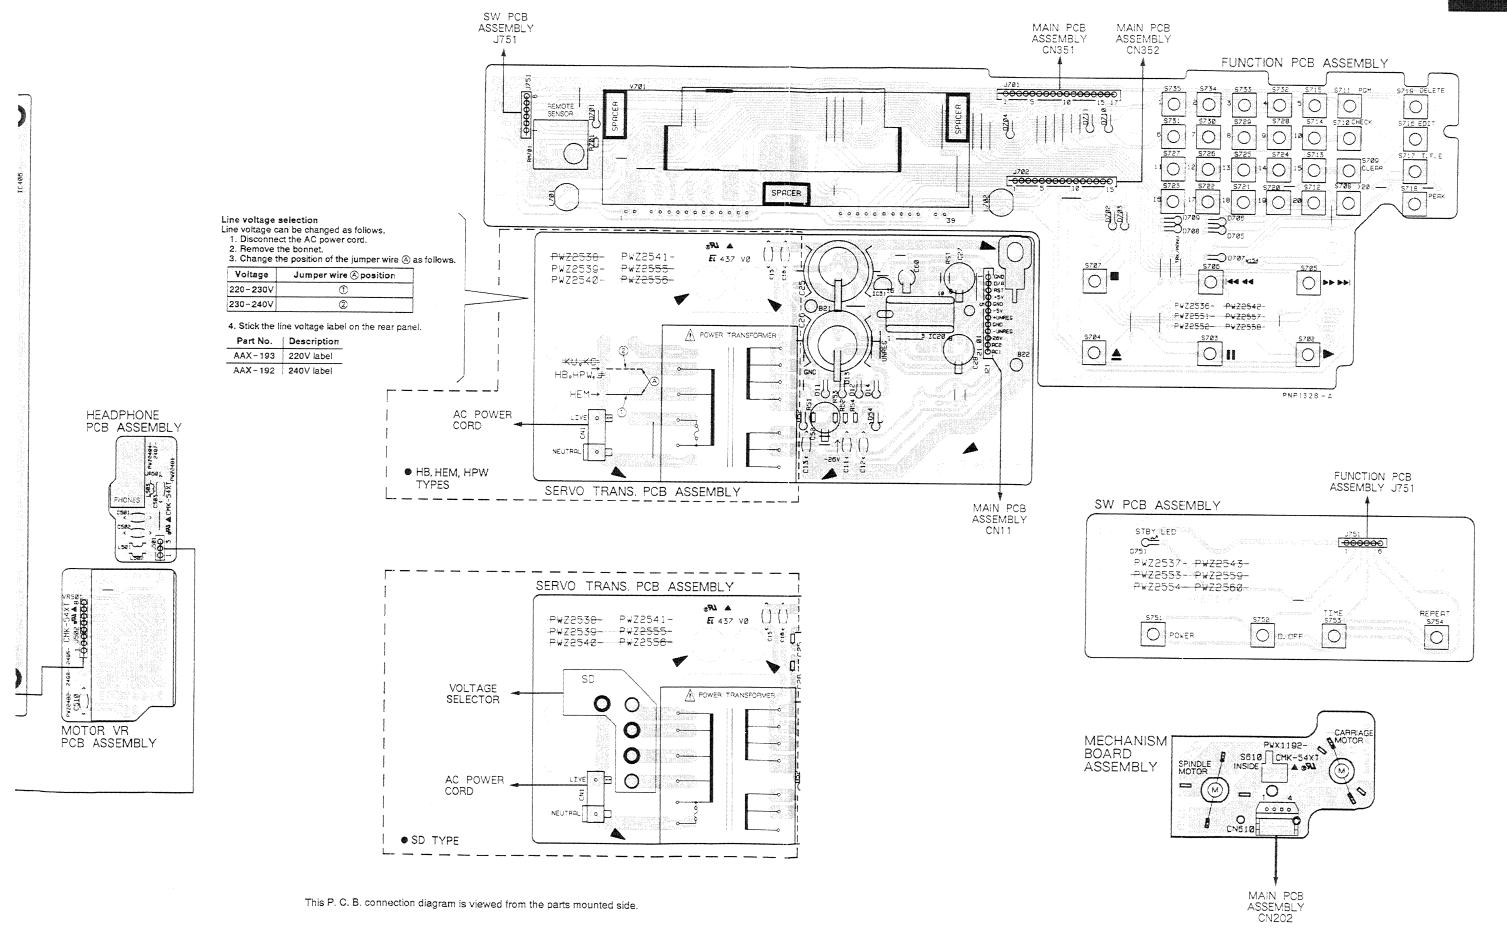

С

...,

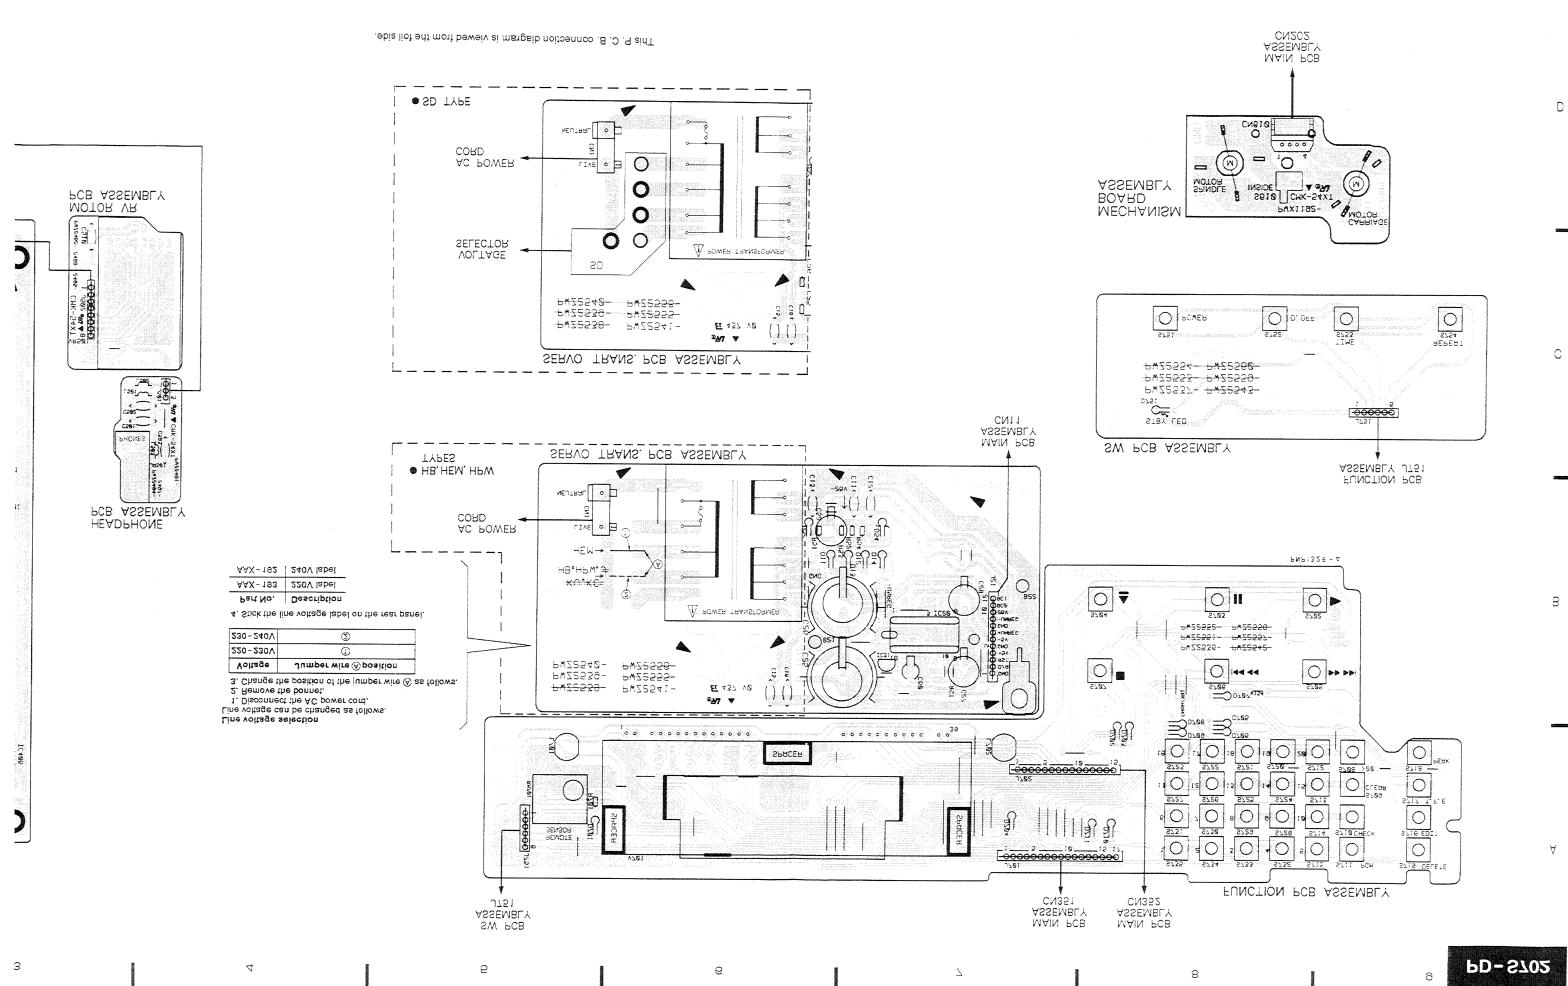

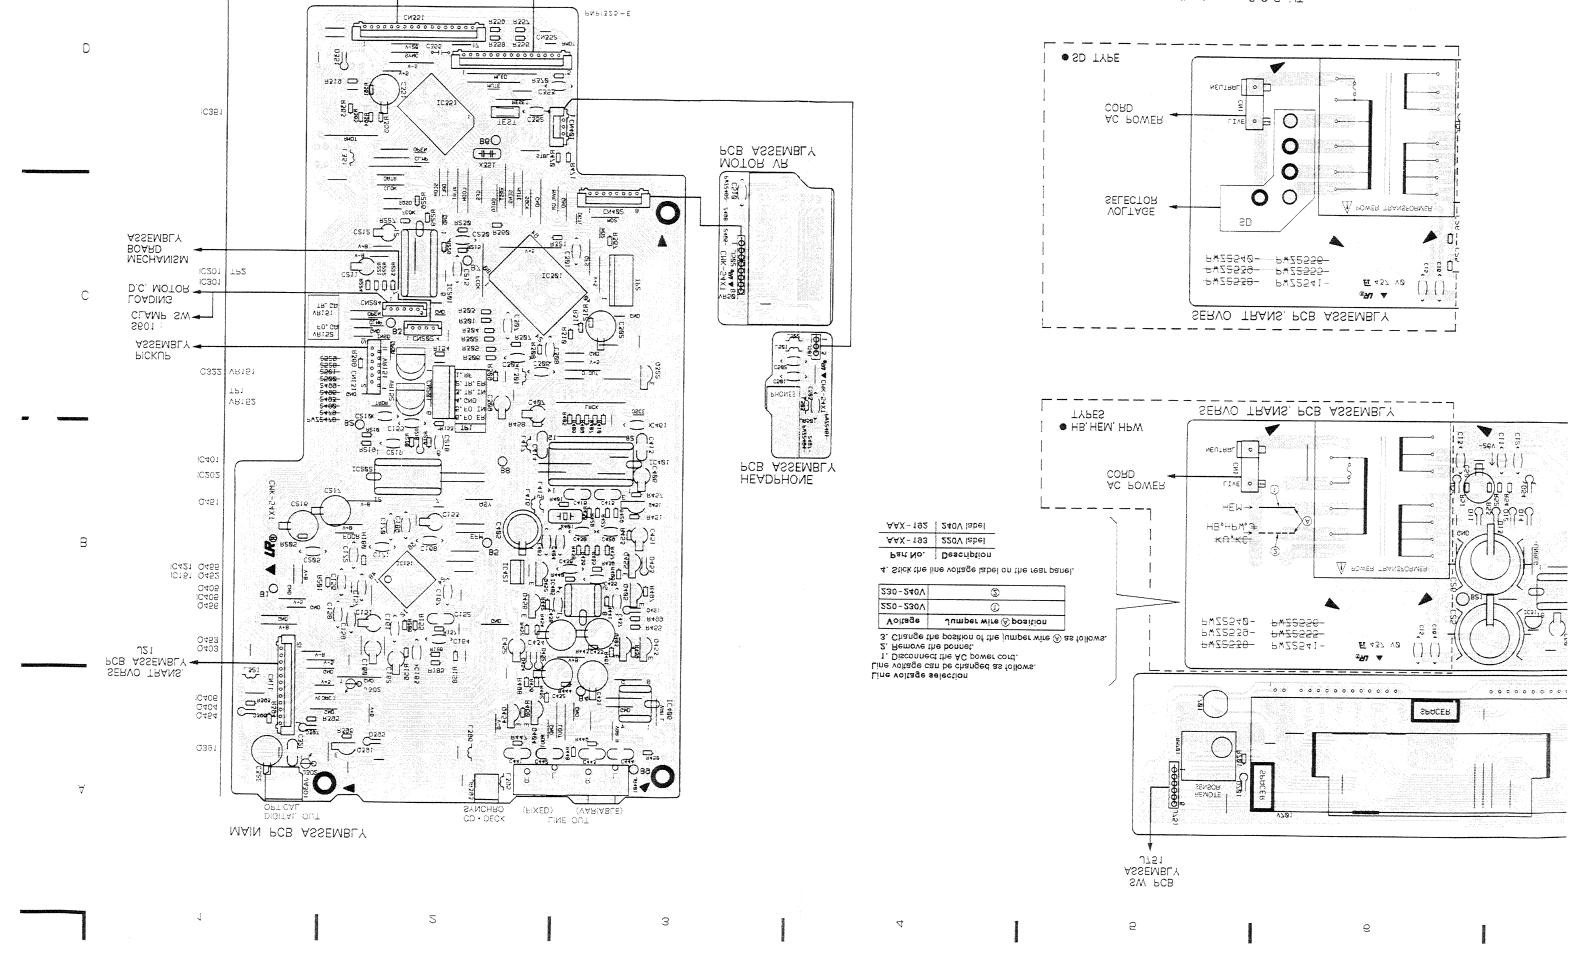

4

2

FUNCTION PCB ASSEMBLY J701 ı

FUNCTION PCB ASSEMBLY J702

This P. C. B. connection diagram is viewed from the foil side.

5. PCB PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by " " are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

$560 \ Q \rightarrow 56 \times 10' \rightarrow 561 \cdots$	···· RD1/8PM[5]6]1]J
$47k \Omega \rightarrow 47 \times 10^3 \rightarrow 473 \cdots$	···· RD1/4PS 4 7 3 J
$0.5 \Omega \rightarrow 0R5 \cdots$	RN2H OR 5 K
1 Ω → 010·····	···· RSIPIOTIOK

Ex.2 When there are 3 effective digits(such as in high precision metal film resistors).

 $5.62k \Omega \rightarrow 562 \times 10^{1} \rightarrow 5621 \cdots RN1/4PC \boxed{5} \boxed{6} \boxed{2} \boxed{1} F$

Mark	No. Description	Part No.	Mark	No.	Description	Part No.
LIST	OF ASSEMBLIES		MAIN	N PCB	ASSEMBLY	
NSP	MOTHER PCB ASSEMBLY	PWM1765	SEMI	CONDL	ICTORS	
NSP	— HEADPHONE PCB ASSEMBLY	PWZ2497		IC151		CXA1372Q
NSP	MOTOR VR PCB ASSEMBLY	PWZ2498		IC301		CXD2500B0
	MAIN PCB ASSEMBLY	PWZ2499	Λ	IC201, I	C202	LA6520
				IC406		M5218AP
NSP	SUB PCB ASSEMBLY	PWX1282	•	IC405		NJM5532DD
	FUNCTION PCB ASSEMBLY	PWZ2536				110111000000
NSP	SW PCB ASSEMBLY	PWZ2537		IC421		NJM7805FA
	SERVO TRANS. PCB ASSEMBLY	PWZ2539		IC401		PD2029A
	55.176 X.II.10. 105 11005111551	1 1122200		IC351		PD4467A
				0391		
NSP	LOADING MECHANISM ASSEMBLY TT	PXA1521			04 0452 0454	2SC1740S
NSP	SERVO MECHANISM ASSEMBLY TT92	PXA1479		Q403, Q4	04, Q453, Q454	2SD2144S
NSP	MECHANISM BOARD ASSEMBLY			0451 04	F.0	
Nor	- MECHANISM BUARD ASSEMBLE	PWX1192		Q451, Q4		DTA124ES
					05, Q455, Q456	DTC124ES
				DZ18, D3	51, D395-D397, D451-D454	1SS254
			COILS	3		
					21, L351, L395, L396, L415-L417	LAU010K
HEA	DPHONE PCB ASSEMBL	Y	CAPA	CITOR	s	
		-	<i></i>	C435-C4		CCCCH050C50
COILS	S			C403		CCCCH120J50
	L501-L503	LAU010K		C404		CCCCH220J50
				C429, C4	30	CCCCH390J50
CAPA	CITORS			C151. C1		CEAS101M10
	C501, C502	CKCYF103Z50		0101, 01		CLASIUIMIU
	C503	CKCYF473Z50		C431, C4	32	CEAS101M25
		0.1011 170500		C405	52	CEAS101M25 CEAS102M16
OTHE	PS.				12, C216, C217	CEAS330M16
	JA501 JACK (PHONES)	PKN1001		C433, C4		CEAS470M50
	0.1001 (1.10.120)	11211001			22, C351	
				C302, C3	22, C331	CEAS471M6R3
MOT	OR VR PCB ASSEMBLY		3	C160, C1	62, C451, C452	CEAS4R7M50
	 //			C309	02, 0401, 0402	CEASR47M50
RESIS	STOR				61, C321, C413-C416	CFTXA104J50
. (5010	VR501(20kΩ)	PCS1010		C441-C4		CFTXA152J50
		1001010		C406, C4		
CAPA	CITOR			C400, C4	01	CFTXA471J50
₩	C510	CKPUYF103Z25		C157 C1	64, C169, C308	CCCVVIADICOE
		O.D. 011 100 <i>000</i>			59, C163, C230, C301	CGCYX103K25
						CGCYX104K25
				C156, C1	00	CGCYX333K25
				C307		CGCYX473K25
				C306		CKCYB152K50

Mark No. Description	Part No.	Mark No. Description	Part No.
C155 C218 C170 C171, C172 C167, C205, C210, C215, C219, C303, C352, C353, C461 C355	CKCYB182K50 CKCYB272K50 CKCYB332K50 CKCYB472K50 CKCYF103Z50	SERVO TRANS. PCB ASSE SEMICONDUCTORS A IC31 A IC20 A D11-D14, D52 D54	ICP-N10 M5298P 11ES2 MTZJ18B
RESISTORS VR151, VR152 (22kΩ) Other resistors OTHERS CN131 FFC CONNECTOR(12P) JA393 MINI JACK(CD-DECK SYNCHRO) JA301 OPTICAL OUTPUT JACK JA401 4P PIN JACK(LIN OUT L, R) X401 CRYSTAL RESONATOR (16. 9344MHz)	RCP1046 RD1/6PM□□□J 12FM-1.0BT PKN1005 TOTX178 DKB1016 PSS1008	CAPACITORS	CEASO 10MS0 CEASI 01M35 CEAS471M6R3 CEAS472M16 CKCYF103Z50 RD1/6PM
X351 CERAMIC RESONATOR (4.19MHz)	VSS1014	MECHANISM BOARD ASSE	RKC-061
FUNCTION PCB ASSEMBLY		SWITCH	-101 10 1
SEMICONDUCTORS D701-D711	1SS254	S610	DSG1016
SWITCHES S702-S735	PSG1006		
COILS L701, L702	LFA010K	·	
RESISTORS All resistors	RD1/6PM□□□J		
OTHERS V701 FLUORESCENT DISPLAY REMOTE SENSOR	PEL1057 SBX1610-51		
SW PCB ASSEMBLY			
SEMICONDUCTOR D751	PCX1019		
SWITCHES S751-S754	PSG1006		

6. ADJUSTMENTS

Adjustment Methods

If a disc player is adjusted incorrectly or inadequately, it may malfunction or not work at all even though there is nothing at all wrong with the pickup or the circuitry. Adjust correctly following the adjustment procedure.

Adjustment Items/Verification Items and Order

If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in steps 1-4, the pickup block may be defective.

Step	item	Test Point	Adjustment Location
1	Focus offset verification	TP1, Pin 6 (FCS. ERR)	None
2	Tracking error balance verification	TP1, Pin 2(TRK. ERR)	None
3	Pickup radial/tangential direction tilt adjustment	TP1, Pin 1 (RF)	Radial tilt adjustment screw, Tangential tilt adjustment screw
4	RF level verification TP1, Pin 1 (RF)		None
5	Focus servo loop gain adjustment	TP1, Pin 5 (FCS. IN) TP1, Pin 6 (FCS. ERR)	VR152 (FCS. GAN)
6 Tracking servo loop gain adjustment		TP1, Pin 3(TRK. IN) TP1, Pin 2(TRK. ERR)	VR151 (TRK. GAN)

• Abbreviation table

FCS. ERR :Focus Error
TRK. ERR :Tracking Error
FCS GAN :Focus Gain
TRK GAN :Tracking Gain
FCS. IN :Focus In
TRK. IN :Tracking In

Measuring Instruments and Tools

- 1. Dual trace oscilloscope (10:1 probe)
- 2. Low-frequency oscillator
- 3. Test disc (YEDS 7)
- 4. Low pass filter ($39k\Omega + 0.001 \mu F$)
- 5. Resistor (100 k Ω)
- 6. Standard tools

Test Point and Adjustment Variable Resistor Positions

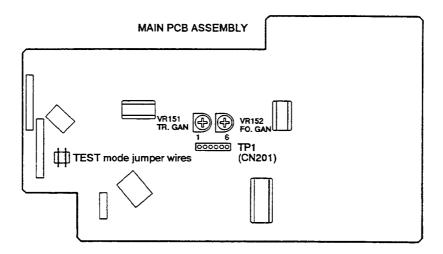


Figure 1. Adjustment Locations

Notes

- 1. Use a 10:1 probe for the oscilloscope.
- 2. All the knob positions (settings) for the oscilloscope in the adjustment procedures are for when a 10:1 probe is used.

Test Mode

These models have a test mode so that the adjustments and checks required for service can be carried out easily. When these models are in test mode, the keys on the front panel work differently from normal. Adjustments and checks can be carried out by operating these keys with the correct procedure. For these models, all adjustments are carried out in test mode.

[Setting these models to test mode]

How to set this model into test mode.

- 1. Unplug the AC power cord from the AC socket.
- 2. Short the test mode jumper wires. (See Figure 1.)
- 3. Plug the AC power cord back into the AC socket.

When the test mode is set correctly, the display is different from what it usually is when the power is turned on. If the display is still the same as usual, test mode has not been set correctly, so repeat Steps I - 3.

[Release from test mode]

Here is the procedure for releasing the test mode:

- 1. Press the STOP key and stop all operations.
- 2. Turn off the power switch on the front panel.

[Operations of the keys in test mode]

Code	Key Name	Function in Test Mode	Explanation
	PGM (PROGRAM)	Focus servo close	The laser diode is lit up and the focus actuator is lifted up, then lowered slowly and the focus servo is closed at the point where the objective lens is focused on the disc. With the player in this state, if you lightly rotate the stopped disc by hand, you can hear the sound the focus servo. If you can hear this sound, the focus servo is operating correctly. If you press this key with no disc mounted, the laser diode lights up, the focus actuator is pulled up, then the actuator is lowered and raised three times and returned to its original position.
Δ	PLAY	Spindle servo ON	Starts the spindle motor in the clockwise direction and when the disc rotation reaches the prescribed speed (about 500 rpm at the inner periphery), sets the spindle servo in a closed loop. Be careful. Pressing this key when there is no disc mounted makes the spindle motor run at the maximum speed. If the focus servo does not go correctly into a closed loop or the laser light shines on the mirror section at the outermost periphery of the disc, the same symptom is occurred.
00	PAUSE	Tracking servo close/open	Pressing this key when the focus servo and spindle servo are operating correctly in closed loops puts the tracking servo into a closed loop, displays the track number being played back and the elapsed time on the front panel, and outputs the playback signal. If the elapsed time is not displayed or not counted correctly or the audio is not played back correctly, it may be that the laser is shining on the section with no sound recorded at the outer edge of the disc, that something is out of adjustment, or that there is some other problem. This key is a toggle key and open/close the tracking servo alternately. This key has no effect if no disc is mounted.

Code	Key Name	Function In Test Mode	Explanation
₩ ₩	TRACK / MANUAL SEARCH REV	Carriage reverse (inwards)	Moves the pickup position toward the inner diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
\text{\tint{\text{\tin}\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\tex{\tex	TRACK / MANUAL SEARCH FWD	Carriage forward (outwards)	Moves the pickup position toward the outer diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
	STOP	Stop	Initializes and the disc rotation stops. The pickup and disc remain where they are when this key is pressed.
	OPEN/CLOSE	Disc tray open/close	Open/close the disc tray. This key is a toggle key and open/close tray alternately. Pressing this key when the disc is turning stops the disc, then opens the tray. This key operation does not affect the position of the pickup.

[How to play back a disc in test mode]

In test mode, since the servos operate independently, playing back a disc requires that you operate the keys in the correct order to close the servos.

Here is the key operation sequence for playing back a disc in test mode.

 PGM(PROGRAM)
 Lights up the laser diode and closes the focus servo.

 ↓
 Starts the spindle motor and closes the spindle servo.

 ↓
 Closes the tracking servo.

Wait at least 2-3 seconds between each of these operations.

1. Focus Offset Verification

● Objective	Verify the	Verify the DC offset for the focus error amp.				
Symptom when out of adjustment	The model	The model does not focus in and the RF signal is dirty.				
Measurement instru- ment connections	Connect the oscilloscope to TP1, Pin 6 (FCS. ERR)		Player state	Test mode, stopped (just the Power switch on)		
	[Settings] 5 mV/division 10 ms/division DC mode		 ◆Adjustment location 	None		
		● Disc	None needed			

Note: If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in adjustment items 1 - 4, the pickup block may be defective.


2. Tracking Error Balance Verification


● Objective	To verify t	To verify that there is no variation in the sensitivity of the tracking photo diode.			
Symptom when out of adjustment	Play does r	Play does not start or track search is impossible.			
Measurement instru- ment connections	Connect the oscilloscope to TP1, Pin 2 (TRK. ERR). This connection may be via a low pass filter.		Player state Adjustment location	Test mode, focus and spindle servos closed and tracking servo open	
	[Settings]	50 mV/division 5 ms/division DC mode	● Disc	YEDS-7	

[Procedure]

- 1. Move the pickup to midway across the disc (R=35 mm) with the TRACK/MANUAL SEARCH FWD $\triangleright \triangleright \triangleright \mid$ or REV $\mid \triangleleft \triangleleft \triangleleft \triangleleft \mid$ key.
- 2. Press the PGM(PROGRAM) key, then the PLAY \triangleright key in that order to close the focus servo then the spindle servo.
- 3. Line up the bright line (ground) at the center of the oscilloscope screen and put the oscilloscope into DC mode.
- 4. Supposing that the positive amplitude of the tracking error signal at TP1, pin 2 (TRK ERR) is (A) and the negative amplitude is (B), the following expression is satisfied.

When
$$A \ge B$$
, $\frac{A-B}{C} \times \frac{1}{2} \le 0.1$
When $A < B$, $\frac{B-A}{C} \times \frac{1}{2} \le 0.1$

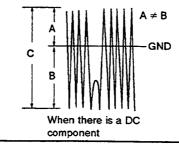

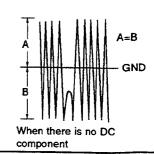



3. Pickup Radial/Tangential Direction Tilt Adjustment

● Objective	To adjust to	To adjust the angle of the pickup relative to the disc so that the laser beams are shone straight down into the disc for the best read out of the RF signals.				
Symptom when out of adjustment	Sound brok	Sound broken; some discs can be played but not others.				
Measurement instru- ment connections	Connect the oscilloscope to TP1, Pin 1 (RF).		● Player state	Test mode, play		
	[Settings]	20 mV/division 200 ns/division AC mode	● Adjustment location ● Disc	Pickup radial tilt adjustment screw and tangential tilt adjustment screw YEDS-7		

[Procedure]

- - Press the PGM (PROGRAM) key, the PLAY \triangleright key, then the PAUSE ||||| key in that order to close the respective servos and put the player into play mode.
- 2. First, adjust the radial tilt adjustment screw with a Phillips screwdriver so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly.
- 3. Next, adjust the tangential tilt adjustment screw with a Phillips screwdriver so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly (Figure 3).
- 4. Adjust the radial tilt adjustment screw and the tangential tilt adjustment screw again so that the eye pattern can be seen the most clearly. As necessary, adjust the two screws alternately so that the eye pattern can be seen the most clearly.
- 5. When the adjustment is completed, lock the radial and tangential adjustment screw. **Note:**Radial and tangential mean the directions relative to the disc shown in Figure 2.

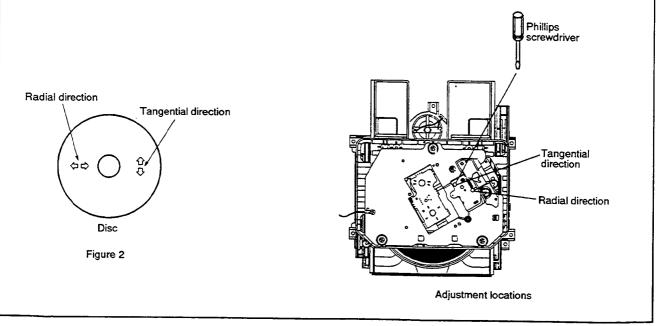

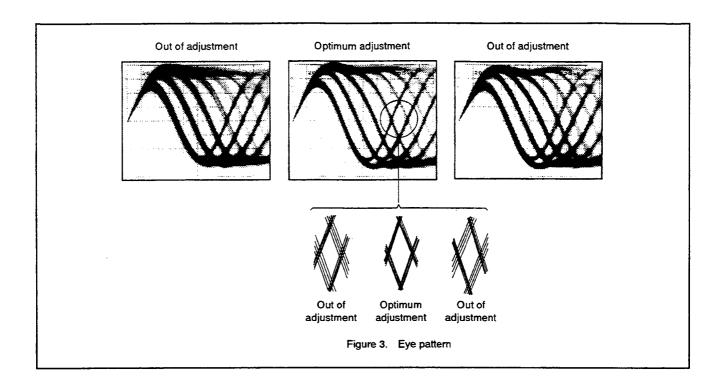

4. RF Level Verification

● Objective	To verify th	To verify the playback RF signal amplitude			
Symptom when out of adjustment	No play or no search				
Measurement instru- ment connections	Connect the oscilloscope to TP1, Pin 1 (RF).		● Player state	Test mode, play	
	[Settings]	50 mV/division 10 ms/division	● Adjustment location	None	
		AC mode	● Disc	YEDS-7	

[Procedure]

- 1. Move the pickup to midway across the disc (R=35 mm) with the TRACK/MANUAL SEARCH FWD ▷▷ ▷▷ or REV I ▷▷ I own key, then press the PGM (PROGRAM) key, the PLAY ▷ key, then the PAUSE []] key in that order to close the respective servos and put the player into play mode.
- 2. Verify the RF signal amplitude is $1.2 \text{Vp-p} \pm 0.2 \text{V}$.

5. Focus Servo Loop Gain Adjustment

● Objective	To optimize the focus servo loop gain.				
 Symptom when out of adjustment 	Playback does not start or focus actuator noisy.				
Measurement instru- ment connections	See figure 4. [Settings]	● Player state	Test mode, play		
	CH1 CH2 20 mV/division 5 mV/division	Adjustment location	VR152 (FCS. GAN)		
	X-Y mode	Disc	YEDS-7		

[Procedure]

- 1. Set the AF generator output to 1.2 kHz and 1 Vp-p.
- 2. Press the TRACK/MANUAL SEARCH FWD DD DD or REV AND key to move the pickup to halfway across the disc (R=35 mm), then press the PGM (PROGRAM) key, the PLAY bey, then the PAUSE wey in that order to close the corresponding servos and put the player into play mode.
- 3. Adjust VR152 (FCS. GAN) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.



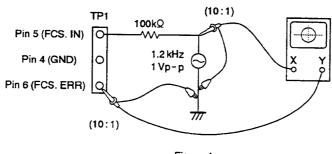


Figure 4


Focus Gain Adjustment

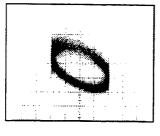

Higher gain

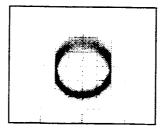

Optimum gain

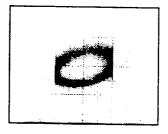


Lower gain

6. Tracking Servo Loop Gain Adjustment

● Objective	To optimize the tracking servo loop gain.				
Symptom when out of adjustment	Playback does not start, during searches the actuator is noisy, or tracks are skipped.				
Measurement instru- ment connections	See Figure 5.	● Player state	Test mode, play		
	[Settings] CH1 CH2	Adjustment location	VR151 (TRK. GAN)		
	50 mV/division 20 mV/division X-Y mode	● Disc	YEDS-7		

[Procedure]

- 1. Set the AF generator output to 1.2 kHz and 2 Vp-p.
- 2. Press the TRACK/MANUAL SEARCH FWD >> >> or REV |<< key to move the pickup to halfway across the disc (R=35 mm), then press the PGM (PROGRAM) key, the PLAY >> key, then the PAUSE [][] key in that order to close the corresponding servos and put the player into play mode.
- 3. Adjust VR151 (TRK. GAN) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.

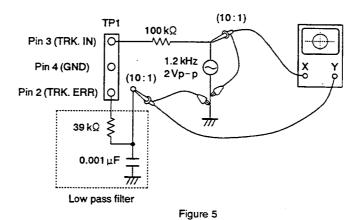


Tracking Gain Adjustment



Higher gain



Optimum gain

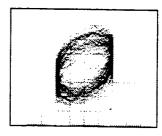

Lower gain



7. FOR PD-S702/HEM, HPW, SD AND PD-S702-G/HEM

NOTES

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The
 ↑ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by " " are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

CONTRAST OF MISCELLANEOUS PARTS


PD-S702/HEM, HPW, SD, PD-S702-G/HEM and PD-S702/HB have the same construction except for the following :

				Part No.			
Mark	Symbol & Description	PD-S702 /HB	PD-S702 /HEM	PD-S702 /HPW	PD-S702 /SD	PD-S702 -G/HEM	Remarks
NSP	SUB PCB assembly	PWX1282	PWX1283	PWX1282	PWX1284	PWX1283	
	SERVO TRANS. PCB assembly	PWZ2539	PWZ2540	PWZ2539	PWZ2541	PWZ2540	
\triangle	AC power cord HB	VDG1051		• • • • •			
Δ	Fuse (FU1, T13A)	VEK1003	• • • •	• • • • •			
	Fuse holder	VKR1002	• • • • •	• • • • •			
\triangle	AC power cord	• • • • •	PDG1003	RDG1022	PDG1013	PDG1003	
Δ	Power transformer (11W) (AC220-230V/230-240V)	PTT1242	PTT1242	PTT1242		PTT1242	
Δ	Power transformer (11W) (AC110V/120-127V/220V/240V)		••••	••••	PTT1243	••••	
NSP NSP	Voltage selector (AC110V/120-127V/220V/240V)	••••	••••	••••	PSB1002	••••	Refer to P5.
NSP	Rear base B7	PNA2021		PNA2021			
NSP	Rear base E7	••••	PNA1970	• • • • •			1
	Rear base D7	••••		• • • • •	PNA2023		
	Rear base E7G	• • • • •				PNA2016	
	Display window	PAM1609	PAM1609	PAM1622	PAM1622	PAM1609	
	Knob C	RAC1608	RAC1608	RAC1608	RAC1608		
	Headphone knob G	• • • • •		• • • •		PAC1680	For knob C
	28key	PAC1734	PAC1734	PAC1734	PAC1734		
	28key G	• • • •	• • • • •	• • • • •		PAC1749	
	Power button 78	PAC1743	PAC1743	PAC1743	PAC1743	• • • • •	
	Power button 78G	• • • • •	• • • • •			PAC1750	
	Function button 78	PAC1744	PAC1744	PAC1744	PAC1744		
	Function button 78G	• • • • •	• • • • •	••••	• • • • •	PAC1751	
	Front panel 7	PAN1280	PAN1280	PAN1280	PAN1280	• • • • •	
	Front panel 7G		• • • • •	• • • • •	••••	PAN1288	
	Function panel 7	PNW2278	PNW2278	PNW2278	PNW2278		
	Function panel 7G	• • • •	••••		• • • • •	PNW2334	
	Tray panel	PNW2280	PNW2280	PNW2280	PNW2280	• • • •	
	Tray panel G	• • • •	• • • • •	• • • • •	• • • • •	PNW2335	
	Name plate	VAM1032	VAM1032	VAM1032	VAM1032	• • • • •	
	Name plate 3182N		••••	• • • • •		RAN1011	
	Bonnet	PYY1175	PYY1175	PYY1175	PYY1175	PYY1176	
İ	Protector R	PHA1253	PHA1245	PHA1245	PHA1245	PHA1245	
	CD packing case B7	PHG1962	• • • • •	PHG1962	PHG1962	• • • • •	
	CD packing case E7	••••	PHG1940	••••	• • • • •	• • • • •	
	CD packing case E7G	• • • •	• • • • •	• • • • •		PHG1957	
	Polyethylene bag	Z21-013	• • • • •	• • • • •		******	
	Remote control unit	PWW1069	PWW1069	PWW1069	PWW1069	PWW1076	
	Battery cover	PZN1001	PZN1001	PZN1001	PZN1001	PZN1011	
	Operating instructions (English)	PRB1196	• • • • •	PRB1196	PRB1196	1211011	
	Operating instructions	• • • •	PRE1183	• • • • •	•••••	PRE1183	
	(English/French/German/Italian/Dutch/ Swedish/Spanish/Portuguese)		-			1101100	

SERVO TRANS, PCB ASSEMBLY

Although PWZ2540, PWZ2541 and PWZ2539 are different in part number, they have the same service parts.


8. PANEL FACILITIES

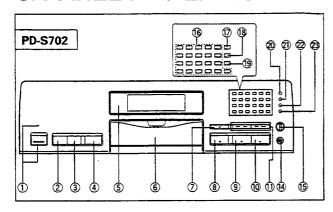

FRONT PANEL

- 1 POWER STANDBY/ON switch and STANDBY indicator
- 2 DISPLAY OFF button
- 3 TIME button
- (4) REPEAT button
- (5) Remote sensor

 Receives the signal from the remote control unit.
- neceives the signal from the re
- 6 Disc tray
- Stop button (■)
- (8) OPEN/CLOSE button (▲)
- 9 Pause button (II)
- ① Play button (►)
- (1) Track/Manual search buttons (►< <</br>
- 14 Headphones jack (PHONES)
- (5) Headphones line/volume control (PHONES/LINE LEVEL)
- 16 Track number/Digit buttons (1 20, >20)
- (17) PGM button
- **18 CHECK button**
- 19 CLEAR button
- 20 DELETE button
- 21 COMPU/•• AUTO EDIT button
- **22 TIME FADE EDIT button**
- **23 PEAK SEARCH button**

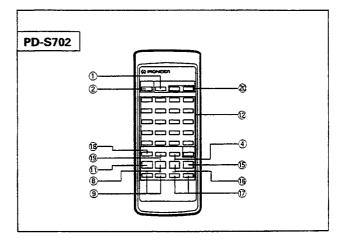

REMOTE CONTROL UNIT

Remote control buttons with the same names or marks as buttons on the front panel of the player control the same operations as the corresponding front panel buttons.

- 1 OPEN/CLOSE button
- 2 POWER button
- 4 Program button (PROGRAM/PGM)
- STOP button (■)
- (9) MANUAL search buttons (◄◄ / ►►)
- (1) RANDOM PLAY button
- 12 Track number/Digit buttons (1 20, >20)
- (15) PLAY button (►)
- (16) PAUSE button (II)
- (17) TRACK search buttons (► >)
- 18 HI-LITE SCAN button
- (19) RESERVE button
- ② OUTPUT LEVEL buttons (-/+)

9. SPECIFICATIONS

1. General	
Type	Compact disc digital audio system
Power requirements	
U.S. model	AC 120 V, 60 Hz
U.K. and Australian models	AC 230 - 240 V, 50/60 Hz
	220 - 230 V/230 - 240 V, 50/60 Hz
	110/120 - 127/220/240 V, 50/60 Hz
Power consumption	
PD 6703	
PD-3702	15 W
Operating temperature	+35°C - +35°C
	+41°F - +95°F
Weight	
PD-S702	4.2 kg (9 lb 4 oz)
External dimensions	
PD-S702	420(W) × 270(D) × 125(H) mm

2. Audio section

PD-S702

Frequency response	2 Hz - 20 kHz
S/N ratio	110 dB or more (EIAJ)
Dynamic range	96 dB or more (EIAJ)
Harmonic distortion	0.0026% or less (EIAJ)
Output voltage	2.0 V
Wow and flutter	Limit of measurement
	(±0.001% W.PEAK) or less (EIAJ)
Channels	2-channel (stereo)

 $16-9/16(W) \times 10-5/8(D) \times 4-15/16(H)$ in.

3. Output terminal

PD-S702

Audio line output jacks (VARIABLE)
Audio line output jacks (FIXED)
Optical digital output jack
CD-DECK SYNCHRO jack
Headphone jack (with motor drive volume control)

4. Functions

Basic operation buttons

PLAY, PAUSE, STOP

Search function

- Direct play
- Track search
- Manual search

Hi-Lite scan

Programming

- Maximum 24 steps
- Pause
- Program check/correction
- Program clear (single track or all tracks)
- Delete play

Repeat functions

- 1 track repeat
- All tracks repeat
- Program play repeat
- Random play repeat
- Delete play repeat
- Delete random play repeat
- Hi-Lite scan repeat

Random play (repeat also available)

Delete random play (repeat also available)

Switching display

Time consumed, remaining time (track/disc), and total time

Display off function

Timer start

Peak search

Auto space

Reserve function

Compu/Auto program editing
Selects the tracks within the specified time.

Time fade editing

5. Accessories

•	Remote control unit	1
•	Size AAA/R03 dry cell batteries	2
•	Output cable	1
•	Operating instructions	1

NOTE:

Specifications and design subject to possible modification without notice, due to improvements.